



**BISSELL®**

# QUICKWASH COMPACT CARPET CLEANER


---

USER GUIDE  
48X4N



**A****B**

1.

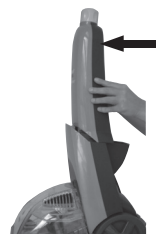

2.



4.



5.

**A-2**

10



11



12



13

**C-1**

1.



2.



3.






4.



## C-2




## C-4

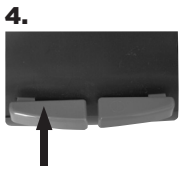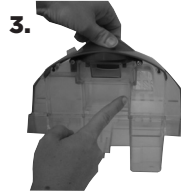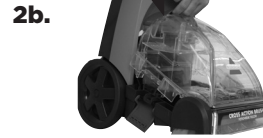

## C-5



## D-2

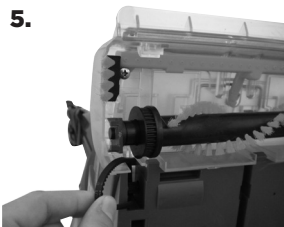

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING YOUR DEEP CLEANER.

When using an electrical appliance, basic precautions should be observed, including the following.

### **WARNING** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Unplug from electrical socket when not in use and before cleaning, maintaining, or servicing the appliance.
- » This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- » Children should be supervised to ensure that they do not play with the appliance.
- » If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- » Do not run appliance over cable.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- » Use only the type and amount of liquids specified under the Operations section of this guide.
- » Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- » Do not leave appliance when plugged in.
- » Always connect to a properly earthed electrical socket. Do not modify earthed plug.
- » Use indoors only.
- » Do not allow to be used as a toy.
- » Use only as described in the user guide.

- » Use only manufacturer's recommended attachments.
- » Do not use with damaged cable or plug.
- » Do not immerse in water or liquid.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service center.
- » Liquid or steam must not be directed towards equipment containing electrical components.
- » Do not pull or carry by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners.
- » Keep cable away from heated surfaces.
- » Do not unplug by pulling on cable.
- » To unplug, grasp the plug, not the cable.
- » Do not handle plug or appliance with wet hands.
- » Do not put any object into openings.
- » Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- » Turn off all controls before unplugging.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible liquids, such as petrol, or use in areas where they may be present.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not use appliance in an enclosed space filled with vapors given off by oil base paint, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Keep appliance on a level surface.
- » Do not carry appliance while in use.
- » Unplug before attaching the TurboBrush Tool.

### **WARNING**

**TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, USE INDOORS ONLY . DO NOT IMMERSE. USE ONLY ON SURFACES MOISTENED BY THE CLEANING PROCESS. USE ONLY BISSELL CLEANING PRODUCTS INTENDED FOR USE WITH THIS MACHINE.**

### **WARNING**

**TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, ALWAYS INSTALL FLOAT BEFORE ANY WET PICK-UP OPERATION.**

## SAVE THESE INSTRUCTIONS

**FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY.**

This model is for household use only.

 
## Thanks for buying a BISSELL deep cleaner

We're glad you purchased a BISSELL deep cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL deep cleaner is well made, and we back it with a limited two-year guarantee. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL deep cleaner.





Thanks again, from all of us at BISSELL.



Mark J. Bissell  
Chairman & CEO

---

## Symbol Definitions

	<b>WARNING</b>	RISK OF FIRE, ELECTRIC SHOCK, OR INJURY.
	<b>TIP</b>	NOTE OR HINT WHICH IS NOT ESSENTIAL BUT MAY IMPROVE USABILITY.
	<b>GUIDE</b>	READ USER GUIDE FOR COMPLETE SAFETY AND USER INSTRUCTIONS.
	<b>WEEE</b>	DO NOT THROW THE APPLIANCE AWAY WITH THE NORMAL HOUSEHOLD WASTE AT THE END OF ITS LIFE, INSTEAD HAND IT IN AT AN OFFICIAL COLLECTION POINT FOR RECYCLING. BY DOING THIS YOU WILL HELP TO PRESERVE THE ENVIRONMENT.

## A Product View



Do not plug in your cleaner until you have completely assembled it per the following instructions and are familiar with all instructions and operating procedures.

- 1 Spray Trigger
- 2 Upper Handle
- 3 Retractable Handle Lock
- 4 Power Cable
- 5 Upper Body
- 6 Formula & Water Tank
- 7 Vent Cover (Foam Filter)
- 8 Dirty Water Tank Latch
- 9 Removable Nozzle

### Cleaning Formulas

Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning formulas may harm the cleaner and may void the guarantee.

- 10 1.5 L 2X Wash & Protect PRO Professional Stain & Odour Formula w/ Scotchgard™ Protector
- 11 1.5 L 2X Wash & Protect PET Pet Stain & Odour Formula w/ Scotchgard™ Protector
- 12 1.5 L 2X Wash & Protect Stain & Odour Formula w/ Scotchgard™ Protector
- 13 1.5 L 2X\* Wash & Refresh Blossom & Breeze w/ Febreze™ Freshness

\*2X concentrated formula, 60 mL is equivalent to 120 mL of non-concentrated formula



To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.



To reduce the risk of fire, use only BISSELL deep cleaning formula for full size machines in your deep cleaner. Use of cleaning formulas that contain lemon or pine oil may damage this appliance and void the guarantee. Chemical spot cleaners or solvent-based soil removers should not be used. These products may react with the plastic materials used in your deep cleaner causing cracking or pitting.

Scotchgard™ is a trademark of 3M®.

Febreze and related trademarks are owned by The Procter & Gamble Company, Cincinnati, Ohio, and used under license by BISSELL Homecare, Inc.

## B Assembly

Your deep cleaner assembles quickly and easily. The only tool you will need for assembly is a Phillips-head screwdriver.

1. Slide Upper Body onto Lower Body. Make sure there is no gap between Upper and Lower Body.
2. Firmly holding Upper Body, screw two screws into holes marked with arrows. If tightening screws is difficult, remove, re-insert, and tighten again.
3. If assembled properly, there should be no gap between Upper and Lower Body. If a gap appears, continue to tighten screws until no gap is present.
4. Slide Upper Handle into Upper Body by aligning pin and sliding into place.

**NOTE: Be sure to secure Upper Handle before lifting. Rotate Handle Lock clockwise to secure.**

5. Place Formula and Water Tank on back of unit.
  6. Wrap Power Cable around Cable Wraps.
- Assembly is now complete.

## C Operations

### Before you clean

1. Plan activities to give carpet time to dry.
2. Move furniture to another area if cleaning entire room (optional).
3. Vacuum area with a dry vacuum cleaner thoroughly before deep cleaning.
4. Plan your cleaning route to leave an exit path. It is best to begin cleaning in the corner farthest from your exit.

## C-1 Filling Formula & Water Tank

1. Remove tank by lifting it straight up, then away from Lower Body.
2. Unscrew black cap located on bottom of tank.
3. Fill with hand hot (not boiling) tap water (140°F/60°C MAX) to WATER line. Fill rest of tank with BISSELL 2X Formula to FORMULA line. Replace and tighten black cap.

**Caution: Do not microwave or boil water before filling.**

4. Place tank on Lower Body.

## C-2 Carpet cleaning

1. Plug into proper outlet.
2. Adjust Retractable Handle by turning counter-clockwise and lifting handle up. Turn clockwise to secure.

3. With foot, press red Power Pedal, located on back of machine.

**NOTE: Handle must be in the full upright position before cleaning.**

4. With foot, press grey Recline Pedal located next to Power Pedal.
5. While pressing trigger, make one slow forward wet pass and another one back.

**Caution: Do not overwet.**

6. Release trigger and make one slow forward and backward pass over the same area.
7. Repeat steps 5 and 6 until solution being pulled up appears clean.
8. Empty Dirty Water Tank when dirty water reaches FULL line, or when Formula and Water Tank is empty.

## C-3 Area rug cleaning

**Important! Please check manufacturer's tag before cleaning area rugs for any specialized cleaning instructions. We do not recommend deep cleaning delicate, silk, wool, antique, or area rugs without a manufacturer's tag.**

When cleaning area rugs, place rug on a sealed surface and test a small, inconspicuous area for colorfastness. Your carpet cleaner should not be used on unsealed surfaces.

Follow carpet cleaning instruction in section C-2. Keep foot of cleaner perpendicular to rug's edge with each cleaning pass to prevent damage.

## C-4 Empty the Dirty Water Tank

1. With foot, press the red Power Pedal to turn off and unplug Power Cable from outlet.
2. Remove Dirty Water Tank from base of unit.
  - a. Release Dirty Water Tank latches (on each side) by pulling up from bottom of latch and then out.
  - b. Carefully remove tank by lifting up on the tank handle.
3. Carry Dirty Water Tank to a toilet or sink. To empty, pour out contents using opening at back of tank.
4. Rinse tank thoroughly and replace on unit.
5. Refill Formula & Water Tank and continue cleaning.

## C-5 Cleaning after use

1. Unplug Power Cable from outlet.
  2. Remove and rinse Dirty Water Tank thoroughly.
  3. Remove tank vent & foam filter (located on top of tank) and rinse.
  4. Clean nozzle window by lifting latch and removing nozzle from machine. Rinse under running water.
  5. When finished replace nozzle and secure with latch.
- NOTE: For best results, it is recommended that the nozzle is cleaned after each use.**
6. Remove lint and hair from red gasket in base of unit. (Do not remove gasket.)
  7. Replace Dirty Water Tank on base of machine and secure with latches.

## ATTENTION

Some Berber carpets have a tendency to fuzz with wear. Repeated strokes in the same area with an ordinary vacuum or deep cleaner may aggravate this condition.

# D Care, Maintenance, & Storage

## D-1 Machine storage

For best results, a few simple steps can assure your machine is well maintained after your cleaning is complete.

**1.** Wrap Power Cable around Quick Release Cable Wrap on side of machine.

**2.** Wipe all surfaces with a soft cloth. Store cleaner upright in a protected, dry area.

**NOTE: You may have cleaning solution remaining in the Formula & Water Tank. You may store your machine this way for the next cleaning task, but never keep dirty water in the Dirty Water Tank.**



To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.



Do not store unit where freezing may occur. Damage to internal components may result.

## D-2 Install the replacement Brush Belt

**1.** Turn machine off and unplug from wall outlet.

**2.** Remove Formula & Water and Dirty Water Tanks.

**3.** Lay machine down to access bottom of the machine.

**4.** With a Phillips-head screwdriver, unscrew Belt Cover and remove.

**5.** Remove Brush End Cap and remove Belt from Brush Roll.

**6.** Brush Roll can now be removed.

**7.** Belt can be removed by sliding off motor pulley.

**8.** Clean or replace Belt. Attach Belt to motor pulley and brush, insert brush into right side end cap.

**9.** Reattach the left end cap and slide brush back into place.

**10.** Replace Belt Cover and screw into place.

**11.** Manually rotate brush to make sure it rotates freely and that belt is aligned properly.



# Consumer Guarantee

This Guarantee only applies outside of the USA and Canada. It is provided by BISSELL International Trading Company BV ("BISSELL").

This Guarantee is provided by BISSELL. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under law which may vary from country to country. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this Guarantee will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this Guarantee or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This Guarantee is given to the original purchaser of the product from new and is not transferable. You must be able to evidence the date of purchase in order to claim under this Guarantee.

## Limited 2 Year Guarantee (from the date of purchase by original purchaser)

Subject to the \*EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product.

BISSELL recommends that the original packaging and evidence of the date of purchase be kept for the duration of the Guarantee period in case the need arises within the period to claim on the Guarantee. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the Guarantee.

If your product is replaced by BISSELL under this Guarantee, the new item will benefit from the remainder of the term of this Guarantee (calculated from the date of the original purchase). The period of this Guarantee shall not be extended whether or not your product is repaired or replaced.

### \*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE GUARANTEE

This Guarantee applies to products used for personal domestic use and not commercial or hire purposes. Consumable components such as filters, belts and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this Guarantee.

This Guarantee does not apply to any defect arising from fair wear and tear. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the User Guide is not covered by this Guarantee.

An unauthorised repair (or attempted repair) may void this Guarantee whether or not damage has been caused by that repair/attempt.

Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this Guarantee.

SAVE AS SET OUT BELOW BISSELL AND ITS DISTRIBUTORS ARE NOT LIABLE FOR ANY LOSS OR DAMAGE THAT IS NOT FORESEEABLE OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT INCLUDING WITHOUT LIMITATION LOSS OF PROFIT, LOSS OF BUSINESS, BUSINESS INTERRUPTION, LOSS OF OPPORTUNITY, DISTRESS, INCONVENIENCE OR DISAPPOINTMENT. SAVE AS SET OUT BELOW BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

BISSELL DOES NOT EXCLUDE OR LIMIT IN ANY WAY ITS LIABILITY FOR (A) DEATH OR PERSONAL INJURY CAUSED BY OUR NEGLIGENCE OR THE NEGLIGENCE OF OUR EMPLOYEES, AGENTS OR SUBCONTRACTORS; (B) FRAUD OR FRAUDULENT MISREPRESENTATION; (C) OR FOR ANY OTHER MATTER WHICH CANNOT BE EXCLUDED OR LIMITED UNDER LAW.

## Consumer Care

**If your BISSELL product should  
require service or to claim under our  
limited guarantee, please contact us  
as follows:**

### Website:

[www.BISSELL.eu](http://www.BISSELL.eu)

## Visit the BISSELL website: [www.BISSELL.eu](http://www.BISSELL.eu)

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: \_\_\_\_\_ Please record your Purchase Date: \_\_\_\_\_

**NOTE: Please keep your original sales receipt. It provides proof of the date of purchase in the event of a Guarantee claim. See Guarantee for details.**